

## Programming System Speed Dial

1. Login by pressing: PROGRAM button
2. Then #, \* and enter password ##### (8#'s)
3. Press SHOW
4. Enter 04 09 1 and press SAVE.
5. Enter the system speed dial number 600 thru 699.
6. Press SHOW (the current number is displayed).
7. Press CHANGE
8. Enter the new number.
9. Press SAVE.